

FOR TECHNICAL SUPPORT OF ANY KIND CALL CONNECT-TEK AT:
(718) 729-3700 9AM-5PM EST. Email: sales@connect-tek.com

FOR A COMPLETE COPY OF THIS MANUAL PLEASE EMAIL YOUR MAILING
ADDRESS, PHONE AND FAX TO: sales@connect-tek.com.

Keyport 2000 Front Panel LCD

Keyport 2000's front panel LCD will display the name assigned to selected PC. Factory set defaults indicate port number. **By entering the EDIT mode**, you may customize this feature to indicate a PC name or attribute that is useful in your application. To obtain your KEYPORT's revision number, and our technical support phone number, enter the QUERY mode.

NOTE that normal switching does not require you to enter any of the following modes.

EDIT Display Mode

(a) To enter the EDIT Display mode, momentarily press and release the left "ctrl" key. Then momentarily press and release the "D" key.

(b) The LCD responds flashing the first character in the display which indicates the port number and there is a beep sound. To avoid any possibility of losing port number identification, the first character cannot be changed. To change the port information shown to the right, press the "Tab" key, the unit responds with a beep sound to confirm you are ready to edit. The flashing cursor will advance to the first character shown. You may now input from your keyboard up to 14 characters of your preference. Press the "Enter" key when you have completed your preference. The unit will again respond with a beep sound to confirm your PC information is saved for future display upon selection of this port.

To change port information for a different port, use the right/left or up/down directional keys on your keyboard to obtain desired port and follow steps outlined above. You will note that LED will flash amber corresponding to the port being edited if that port is not selected, the selected port is a constant amber indication.

(c) To resume normal use of your KEYPORT, you must exit the EDIT mode in one of the following ways:

- i) To return to the PC selected prior to entering the EDIT mode, press the "Esc" key twice on your keyboard.
- ii) To directly select the port shown on the LCD, press the "Enter" key twice on your keyboard.

Note that after entering EDIT or SCROLL display mode, if no keystrokes are made for 60 seconds, the KEYPORT will resume to the normal operation mode with LCD indicating port selected.

SCROLL Display Mode

The SCROLL Display mode allows you to scroll through ports to review current LCD information for each port and select the port shown if desired.

- (a) To enter the DISPLAY mode, momentarily press and release the left "ctrl" key. Then momentarily press and release the "D" key.
- (b) The KEYPORT responds with a beep sound and the first character showing port number will flash.
- (c) Ports are factory set to show " # Port #" (see edit mode to custom configure). To scroll through ports, use directional keys (left/right or up/down). To select port shown on LCD, press "Enter" key on your keyboard. To return to port selected prior to entering the DISPLAY mode, press "ESC" key on your keyboard.

QUERY Mode

To enter the QUERY mode, press and release the left "ctrl" key and then the "Q" key. The unit will respond with revision number information and our technical support phone number. To exit the QUERY mode, press the "Esc" or "Enter" key on your keyboard and the unit will return to the normal operation mode.

HOT KEYS

PC Selection via Keyboard

To switch directly to any active PC port the user should follow the simple two-key sequence described below:

- (a) Momentarily press and **release** the left "Ctrl" key.
- (b) **4 & 8 PORT MODELS**-- Momentarily press and release the single digit (i.e. 1, 2.....8) corresponding to the desired PC port using the top row number keys.

12 & 16 PORT MODELS-- All ports must be addressed in a two digit sequence, therefore for ports 1-9: momentarily press and release zero and the corresponding PC port (i.e. 01, 02....09). Ports 10-16 are two digits and are entered directly (i.e. 10, 11, 12...16). In all cases, only entries made with the top row number keys will be recognized (do not use the numeric keypad).

PLEASE NOTE: Step A & B are performed in sequence
NOT SIMULTANEOUSLY.